



Providing the Astronomical Community with Premier Products, Services, and Training

Astro-Smart, www.astro-smart.com

RF Module Instructions:

Connection Steps:

- 1. Connect the Slave module to the CDAP/CDA-R with supplied mini gender changer.**
 - a. This RF module should have the following switch settings.**
 - i. Pwr Switch DB9, Slave and DCE set.**
- 2. Connect the Master module to your computers USB ports.**
 - a. One USB for Power with supplied USB power cable.**
 - b. One USB to Serial converter attached to your RF master module.**
 - c. This RF module should have the following switch settings.**
 - i. Pwr Switch USB, Master and DTE set.**
- 3. Now synchronize the RF modules by using the supplied toothpick and pressing underneath the slave module in item 1 and note the front led panel places the TX/RX leds light briefly and then you will see the RX led on the slave and master flashing in sync.**
- 4. You are now ready to use the SW program to receive data. In the SW CDAP/CDA-R program, connect to the USB port that the USB serial converter is connected to.**
- 5. See video #5 on the site as well at:**
http://www.astro-smart.com/index.php?p=1_49_Video-Overviews
- 6. Note: It is recommended after testing, the modules be at least 1 Meter apart.**

Email me for any other questions.

Dale DiDomenico

Owner/Designer
Astro-Smart.com
www.astro-smart.com
dale@astro-smart.com

Astro-Smart